


HYDRONIC

**Technical description, installation,
operation and maintenance instructions.**

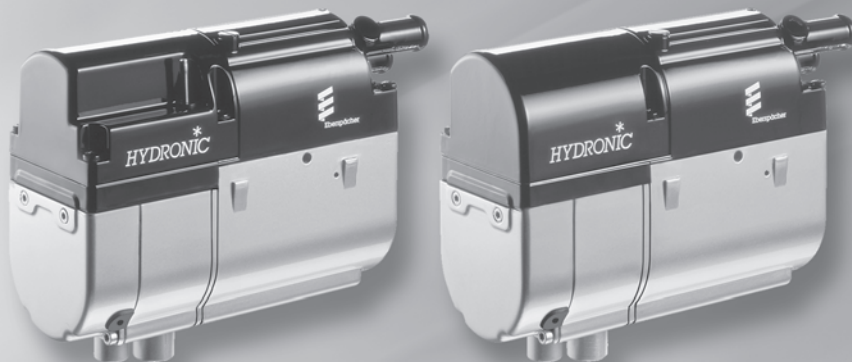

Heater	Order no.	Heater	Order no.
<i>HYDRONIC B 4 W SC – 12 volt</i>	20 1824 05 00 00	<i>HYDRONIC D 4 W SC – 12 volt</i>	25 2257 05 00 00
<i>HYDRONIC B 4 W SC – 12 volt as complete package</i>	20 1821 05 00 00	<i>HYDRONIC D 4 W SC – 12 volt as complete package</i>	25 2221 05 00 00
<i>HYDRONIC B 5 W SC – 12 volt</i>	20 1820 05 00 00	<i>HYDRONIC D 5 W SC – 12 volt</i>	25 2219 05 00 00
<i>HYDRONIC B 5 W SC – 12 volt as complete package</i>	20 1823 05 00 00	<i>HYDRONIC D 5 W SC – 12 volt as complete package</i>	25 2229 05 00 00

**Water heater for diesel and petrol
operating independently of the engine.**



Eberspächer

1 Introduction

Contents

Chapter	Title	Contents	Page
1	Introduction	<ul style="list-style-type: none">• Contents 2• Concept of this manual 3• Special text structure, presentation and picture symbols 4• Important information before starting work 4• Statutory regulations 5, 6• Safety instructions for installation and operation 7• Accident prevention 7	
2	Product information	<ul style="list-style-type: none">• Scope of supply petrol heaters 8, 9• Scope of supply diesel heaters 10, 11• Technical data petrol heaters 12• Technical data diesel heaters 13• Main dimensions 14	
3	Installation	<ul style="list-style-type: none">• Installation and location 15• Possible installation positions 16• Mounting and fastening 16• Nameplate 17• Connection to the cooling water circuit 18 – 21• Exhaust system 22• Combustion air system 23• Fuel supply petrol heaters 25 – 27• Fuel supply diesel heaters 28 – 30	
4	Operation and function	<ul style="list-style-type: none">• Operating instructions / important information for operation 31• Initial commissioning 31• Description of functions 31• Control and safety devices 32	
5	Electrical system	<ul style="list-style-type: none">• Heater wiring 33• Parts list for the circuit diagrams 33, 34• Circuit diagrams at the end of this manual	
6	Troubleshooting Maintenance Service	<ul style="list-style-type: none">• In case of faults, please check the following points 35• Troubleshooting 35• Maintenance instructions 35• Service 35	
7	Environment	<ul style="list-style-type: none">• Certification 36• Disposal 36• EU Declaration of Conformity 36	
8	Lists	<ul style="list-style-type: none">• List of key words 37, 38• List of abbreviations 38	



1 Introduction

Concept of this manual

This manual aims to support the service company installing the heater and to provide the user with all important information about the heater. The manual has been divided into 8 chapters to make it easier to find the corresponding information quickly.

1 Introduction
Here you will find important introductory information about installation of the heater and about the structure of the manual.

2 Product information
Here you will find information about the scope of supply, the technical data and the dimensions of the heater.

3 Installation
Here you will find important information and instructions referring to installation of the heater.

4 Operation and function
Here you will find information about the operation and function of the heater.

5 Electric system
Here you will find information about the electronic system and electronic components of the heater.

6 Troubleshooting / maintenance / service
This section contains information on possible faults and malfunctions, troubleshooting, maintenance and the service hotline.

7 Environment
Here you will find information about certification and disposal of the heater together with the EU Declaration of Conformity.

8 Lists
Here you will find the key word list and abbreviations list.

1 Introduction

Special text structure, presentation and picture symbols

This manual uses special text structures and picture symbols to emphasise different contents. Please refer to the examples below for the corresponding meanings and associated actions.

Special structure and presentations

A dot (•) indicates a list which is started by a heading. If an indented dash (–) follows a dot, this list is subordinate to the dot.

Picture symbols



Regulation!

This picture symbol with the remark "Regulation" refers to a statutory regulation. Failure to comply with this regulation results in expiry of the type permit for the heater and preclusion of any guarantee and liability claims on J. Eberspächer GmbH & Co. KG and its associated companies.



Danger!

This picture symbol with the remark "Danger!" refers to the risk of a fatal danger to life and limb. Under certain circumstances, failure to comply with these instructions can result in severe or life-threatening injuries..



Caution!

This picture symbol with the remark "Caution!" refers to a dangerous situation for a person and / or the product.

Failure to comply with these instructions can result in injuries to people and / or damage to machinery.

Please note!

These remarks contain application recommendations and useful tips for installation of the heater.

Important information before starting work

Range of application of the heater

The water heater operating independently of an engine is intended for installation in the following vehicles, depending on its heating output:

- Vehicles of all kinds
- Construction machinery
- Agricultural machinery
- Boats, ships and yachts

Please note!

Installation of the heater is **not** permitted in vehicles used for the transport of dangerous goods as per ADR / ADR99.

Purpose of the heater (using the vehicle heat exchanger)

- Pre-heating, de-misting windows
- Heating and keeping the following warm:
 - Driver and working cabs
 - Freight compartments
 - Ship's cabins
 - Passenger and crew compartments
 - Vehicle engines and units

On account of its functional purpose, the heater is **not** permitted for the following applications:

- Long-term continuous operation, e.g. for pre-heating and heating of:
 - Residential rooms
 - Garages
 - Work huts, weekend homes and hunting huts
 - Houseboats, etc.



Caution!

Safety instructions for application and proper purpose

- The heater must only be used and operated for the range of application stated by the manufacturer in compliance with the "Operating instructions" included with every heater.



1 Introduction

Statutory regulations

The Federal Road Transport Directorate has issued an "EC type approval" and an "EMC type approval" for the heater for installation in motor vehicles and with the following official type approval marks, noted on the heater name plate.

HYDRONIC EC-e100 0023

EMC-e1031075



Regulation!

Directive 2001 / 56 / EU of the European Parliament and the Council

• Arrangement of the heater

- Parts of the structure and other components near the heater must be protected from excess heat exposure and possible contamination from fuel or oil.
- The heater must not pose a fire hazard even when it overheats.
This requirement is deemed to be fulfilled when adequate clearance to all parts is observed during installation, sufficient ventilation is provided and fire-proof materials or heat plates are used.
- The heater must not be located in the passenger compartment in vehicles of class M₁, M₂, M₃ and N. A unit may however be used in a hermetically sealed housing which also corresponds to the conditions stated above.
- The factory nameplate or duplicate must be affixed so that it can still be easily read when the heater is installed in the vehicle.
- All appropriate precautions must be taken when arranging the heater to minimise the risk of injuries to persons or damage to other property.

• Fuel supply

- The fuel intake connection must not be located in the passenger compartment and must be sealed with a properly closing lid to prevent any fuel leaks.
- In heaters for liquid fuel where the heater fuel is separate from the vehicle fuel, the type of fuel and intake connection must be clearly identified.
- A warning sign is to be fixed to the intake connection indicating that the heater must be switched off before refuelling.

• Exhaust system

- The exhaust outlet must be arranged so as to prevent any penetration of exhaust fumes into the vehicle interior through the ventilation system, warm air intakes or open windows.

• Combustion air intake

- The air for the heater combustion chamber must not be sucked in from the passenger compartment of the vehicle.
- The air intake must be arranged or protected in such a way that it cannot be blocked by other objects.

• Operating status display

- A clearly visible operating display in the user's field of vision must indicate when the heater is switched on and off.

1 Introduction

§ Regulations

Additional regulations for certain vehicles named in Directive 94 / 55 / EC (ADR Framework Directive)

Scope

This appendix applies to vehicles for which the special provisions of Directive 94 / 55 / EC apply to combustion heaters and their installation.

Definition of terms used

For the purposes of this appendix, the vehicle designations "EX / II", "EX / III", "AT", "FL" and "OX" according to Chapter 9.1 of Annex B of Directive 94 / 55 / EC are used.

Technical regulations

General provisions (EX / II, EX / III, AT, FL and OX vehicles)

Avoid heating and ignition

The combustion heaters and their exhaust gas routing shall be designed, located, protected or covered so as to prevent any unacceptable risk of heating or ignition of the load. This requirement shall be considered as fulfilled if the fuel tank and the exhaust system of the appliance conform to provisions in 3.1.1.1 and 3.1.1.2. Compliance with these regulations shall be checked in the complete vehicle.

Fuel tanks

Fuel tanks for supplying the heater shall conform to the following regulations:

- In the event of any leakage, the fuel shall drain to the ground without coming into contact with hot parts of the vehicle or the load;
- fuel tanks containing petrol shall be equipped with an effective flame trap at the filler opening or with a closure enabling the opening to be kept hermetically sealed.

Exhaust system and exhaust pipe layout

The exhaust system as well as the exhaust pipes shall laid out or protected to avoid any danger to the load through heating or ignition. Parts of the exhaust system situated directly below the fuel tank (diesel) shall have a clearance of at least 100 mm or be protected by a thermal shield.

Switching on the combustion heater

The combustion heater may only be switched on manually. Automatic switching on via a programmable switch is not permitted.

EX / II and EX / III vehicles

Combustion heaters for gaseous fuels are not permitted.

FL vehicles

Combustion heaters must be able to be taken out of service/disabled at least by the methods described in the following:

- a) Switching off manually in the driver's cabin
- b) Switching off the vehicle's engine; in this case the heater may be manually switched back on by the vehicle driver;
- c) Starting up of a feed pump installed in the vehicle for the dangerous goods carried.

Combustion heater after-run

After-running of the switched off combustion heater is permitted. In the cases named in the "FL vehicles" paragraph under letters b) and c) the supply of combustion air must be interrupted by suitable means after a maximum after-run period of 40 seconds. Only combustion heaters whose heat exchangers are verifiably not damaged by the reduced after-run period of 40 seconds beyond their usual use period may be used.

Please note!

- Compliance with the statutory regulations, the additional regulations and safety instructions is prerequisite for guarantee and liability claims. Failure to comply with the statutory regulations and safety instructions and incorrect repairs even when using original spare parts make the guarantee null and void and preclude any liability for J. Eberspächer GmbH & Co. KG.
- Subsequent installation of this heater must comply with these installation instructions.
- The statutory regulations are binding and must also be observed in countries which do not have any special regulations.
- When the heater is to be installed in vehicles not subject to the German Ordinance for the Registration of Motor Vehicles (StVZO), for example ships, the specially valid regulations and installation instructions for these special applications must be observed.
- Installation of the heater in special vehicles must comply with the regulations applying to such vehicles.
- Other installation requirements are contained in the corresponding sections of this manual.



1 Introduction

Safety instructions for installation and operation



Danger!

Risk of injury, fire and poisoning

- Disconnect the vehicle battery before starting any kind of work.
- Before working on the heater, switch the heater off and let all hot components cool down.
- The heater must not be operated in enclosed rooms, e.g. in the garage or multi-storey car park.



Caution!

Safety instructions for installation and operation

- The heater must only be installed by a JE partner authorised by the manufacturer according to the instructions in this manual and possibly according to special installation recommendations; the same applies to any repairs to be carried out in the case of repairs or guarantee claims.
 - Repairs by non-authorised third-parties or with not original spare parts are dangerous and therefore not allowed. They result in expiry of the type permit of the heater; consequently, when installed in motor vehicles they can cause expiry of the vehicle operating licence.
 - The following measures are not allowed:
 - Changes to components relevant to the heater.
 - Use of third-party components not approved by J. Eberspächer GmbH & Co. KG.
 - Nonconformities in installation or operation from the statutory regulations, safety instructions or specifications relevant to safe operation as stated in the installation instructions and operating instructions. This applies in particular to the electrical wiring, fuel supply, combustion air system and exhaust system.
 - Only original accessories and original spare parts must be used during installation or repairs.
 - Only original accessories and original spare parts must be used during installation or repairs.
 - Only the controls approved by Eberspächer may be used to operate the heater. The use of other controls can result in malfunctions.
 - Before the heater is installed again in another vehicle, rinse the heater parts carrying water with clear water.
- When carrying out electric welding on the vehicle, the plus pole cable at the battery should be disconnected and placed at ground to protect the controller.
 - The heater must not be operated where there is a risk of an accumulation of flammable vapours or dust, for example close to
 - fuel depot
 - coal depot
 - wood depot
 - grain depots etc.
 - The heater must be switched off when refuelling.
 - When the heater is mounted in a safety housing etc., the installation compartment of the heater is not a stowage compartment and must be kept clear. In particular fuel canisters, oil cans, spray cans, gas cartridges, fire extinguishers, cleaning rags, items of clothing, paper etc. must not be stored or transported on or next to the heater.
 - Defect fuses must only be replaced by fuses with the prescribed rating.
 - If fuel leaks from the heater fuel system, arrange for the damage to be repaired immediately by a JE service partner.
 - When topping up the coolant, only use the coolant permitted by the vehicle manufacturer, see the vehicle operating manual. Any blending with unpermitted coolant can cause damage to the engine and heater.
 - After-running of the heater must not be interrupted prematurely e.g. by pressing the battery disconnecting switch, apart from in the case of an emergency stop.

Accident prevention

General accident prevention regulations and the corresponding workshop and operation safety instructions are to be observed.

2 Product information

Scope of supply for petrol heaters

Quantity / Designation	Order number
1 HYDRONIC B 4 W SC – 12 V	20 1824 05 00 00

To be ordered separately:

1 Universal installation kit	20 1824 80 00 00
1 Control unit*	–

or

1 HYDRONIC B 4 W SC – 12 V as complete package**	20 1821 05 00 00
---	------------------

To be ordered separately:

1 Control unit*	–
-----------------	---

or

1 HYDRONIC B 5 W SC – 12 V	20 1820 05 00 00
----------------------------	------------------

To be ordered separately:

1 Universal installation kit	20 1820 80 00 00
1 Control unit*	–

or

1 HYDRONIC B 5 W SC – 12 V as complete package**	20 1823 05 00 00
---	------------------

To be ordered separately:

1 Control unit*	–
-----------------	---

* Control units see price list / accessories catalogue.

** Complete package contains:
1 Heater
1 Universal installation kit

Parts list for the picture “Scope of supply” on page 9

Scope of supply for petrol heater

Picture No.	Designation
1	Heater
2	Dosing pump

Scope of supply for universal installation kit

Picture No.	Designation
3	Exhaust silencer
4	Cable tree, heater
5	Cable harness, plus
6	Heater bracket
7	Water hose
8	Flexible exhaust pipe
9	Cable tie
10	Bracket, dosing pump
11	Pipe, 6 x 2
12	Combustion air hose
13	Hose, 5 x 3
14	Pipe, 4 x 1

Cable harnesses

(A) Cable harness “Controls”

(B) Cable harness “Fan control”

(C) Plus cable

(D) Minus cable

Please note!

- Parts without picture number are small parts and packed in a bag.
- Please consult the additional parts catalogue if any other parts are required for installation.

2 Product information

Scope of supply for diesel heaters

Quantity / Designation	Order number
1 <i>HYDRONIC</i> D 4 W SC – 12 V	25 2257 05 00 00

To be ordered separately:

1 Universal installation kit	25 2257 80 00 00
1 Control unit*	–

or

1 <i>HYDRONIC</i> D 4 W SC – 12 V as complete package**	25 2221 05 00 00
--	------------------

To be ordered separately:

1 Control unit*	–
-----------------	---

or

1 <i>HYDRONIC</i> D 5 W SC – 12 V	25 2219 05 00 00
-----------------------------------	------------------

To be ordered separately:

1 Universal installation kit	25 2219 80 00 00
1 Control unit*	–

or

1 <i>HYDRONIC</i> D 5 W SC – 12 V as complete package**	25 2229 05 00 00
--	------------------

To be ordered separately:

1 Control unit*	–
-----------------	---

* Control units see price list / accessories catalogue.

** Complete package contains:
1 Heater
1 Universal installation kit

Parts list for the picture “Scope of supply” on page 11

Scope of supply for diesel heater

Picture No.	Designation
1	Heater

Scope of supply for universal installation kit

Picture No.	Designation
2	Exhaust silencer
3	Cable tree, heater
4	Cable harness, plus
5	Heater bracket
6	Water hose
7	Flexible exhaust pipe
8	Cable tie
9	Combustion air hose
10	Hose, 3,5 x 3
11	Pipe, 4 x 1

Cable harnesses

(A) Cable harness “Controls”

(B) Cable harness “Fan control”

(C) Plus cable

(D) Minus cable


Please note!

- Parts without picture number are small parts and packed in a bag.
- Please consult the additional parts catalogue if any other parts are required for installation.



2 Product information

Scope of supply for diesel heaters

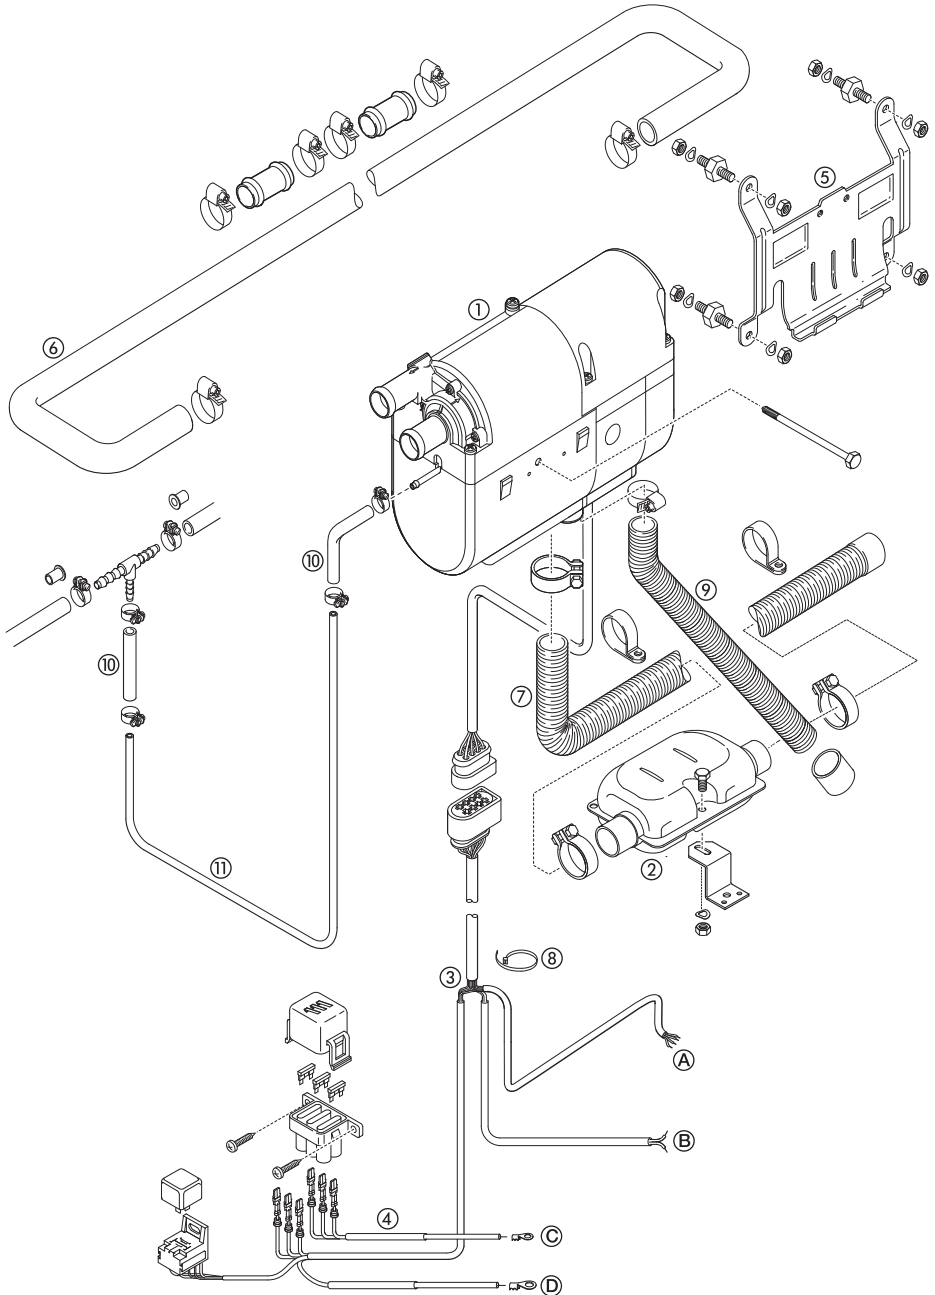

2 Product information

Technical data for petrol heaters

Heater		HYDRONIC B 4 W SC		HYDRONIC B 5 W SC	
Heating medium		Water, cooling fluid			
Control of the heat flow		Large	Small	Large	Small
Heat flow (watt)		4300	1500	5000	1500
Fuel consumption (l/h)		0.6	0.2	0.69	0.2
Mean electr. power (watt)	in operation	48	22	50	22
	at start	120			
	after-running	21			
Rated voltage		12 volt			
Operating range		10.2 volt			
<ul style="list-style-type: none"> Lower voltage limit: An undervoltage protection in the controller switches the heater off on reaching approx 10.2 volt. 					
<ul style="list-style-type: none"> Upper voltage limit: An overvoltage protection in the controller switches the heater off on reaching approx 16 volt. 		16 volt			
Tolerable operating pressure		up to 2.5 bar overpressure			
Flow rate of the water pump at 0.1 bar		900 l/h ± 100 l/h			
Minimum water flow rate of the heater		250 l/h			
Fuel – see also “fuel quality petrol heaters” page 30		Commercially available petrol (DIN EN 228)			
Tolerable operating temperature	Operation	–40 °C to +80 °C			
	Storage	–40 °C to +105 °C			
Interference suppression class		5 for VHF, SW, MW 2 for LW			
Weight without dosing water and add on pieces		approx. 2.7 kg			



Caution!

Safety instructions for technical data!

Failure to comply with the technical data can result in malfunctions.

All technical data ±10 %



2 Product information

Technical data for diesel heaters

Heater		HYDRONIC D 4 W SC		HYDRONIC D 5 W SC	
Heating medium		Water, cooling fluid			
Control of the heat flow		Large	Small	Large	Small
Heat flow (watt)		4300	2400	5000	2400
Fuel consumption (l/h)		0.53	0.27	0.62	0.27
Mean electr. power (watt)	in operation	48	23	50	23
	at start	120			
	after-running	21			
Rated voltage		12 volt			
Operating range		10.2 volt			
• Lower voltage limit: An undervoltage protection in the controller switches the heater off on reaching approx 10.2 volt.					
• Upper voltage limit: An overvoltage protection in the controller switches the heater off on reaching approx 16 volt.		16 volt			
Tolerable operating pressure		up to 2.5 bar overpressure			
Flow rate of the water pump at 0.1 bar		900 l/h ± 100 l/h			
Minimum water flow rate of the heater		250 l/h			
Fuel – see also “fuel quality diesel heaters” page 30		Commercially available diesel (DIN EN 590)			
Tolerable operating temperature	Operation	–40 °C to +80 °C			
	Storage	–40 °C to +105 °C			
Interference suppression class		5 for VHF, SW, MW 2 for LW			
Weight without dosing water and add on pieces		approx. 2.9 kg			



Caution!


Safety instructions for technical data!

Failure to comply with the technical data can result in malfunctions.


All technical data ±10 %

2 Product information

Main dimensions petrol heater

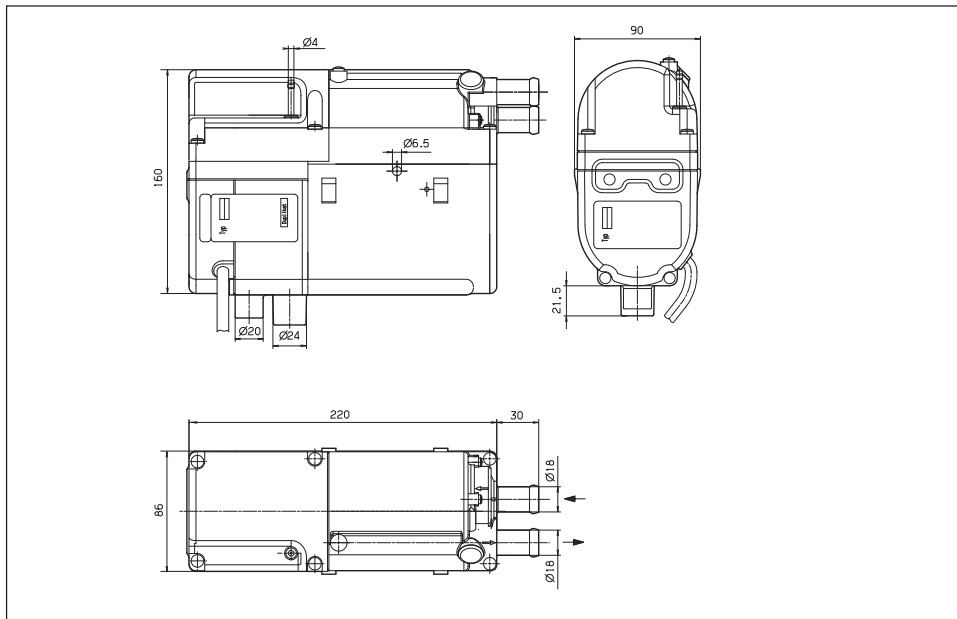

Main dimensions diesel heater

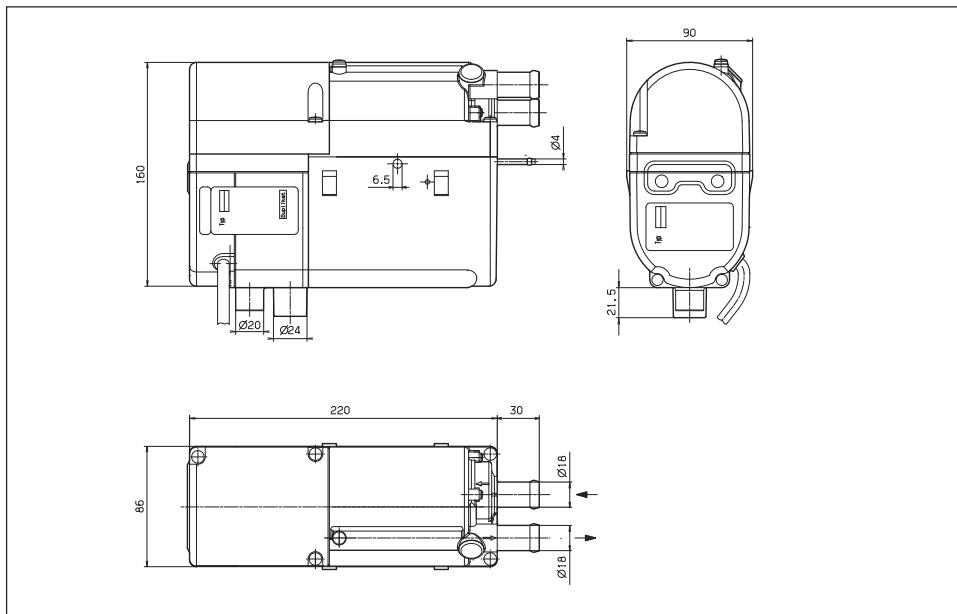

3 Installation


Installation location

The installation location for the heater is the engine compartment. The heater must be mounted below the min. cooling water level (compensation tank, cooler, vehicle heat exchanger) for automatic venting of the heat exchanger of the heater and the water pump.

Please note!


- The regulations and safety instructions to be observed for this chapter are stated on page 4 – 7.
- The installation suggestions made in the installation instructions are examples. Other installation locations are possible if they correspond to the installation requirements stated in these installation instructions.
- Other installation information (e.g. for boats and ships) is available from the manufacturer on request.
- Observe the tolerable installation position together with the operating and storage temperatures.

Installation example for petrol heater in a car

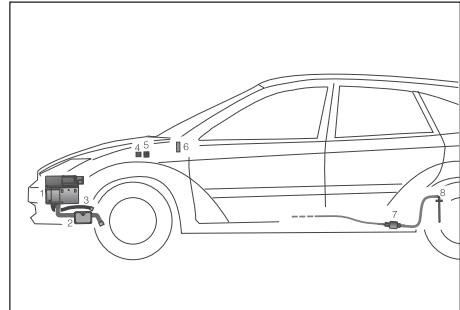

- ① Heater
- ② Exhaust pipe with exhaust silencer
- ③ Combustion air intake silencer
- ④ Fan relay
- ⑤ Fuse bracket
- ⑥ Mini timer
- ⑦ Dosing pump
- ⑧ Rising pipe

Installation example for diesel heater in a delivery van and a car

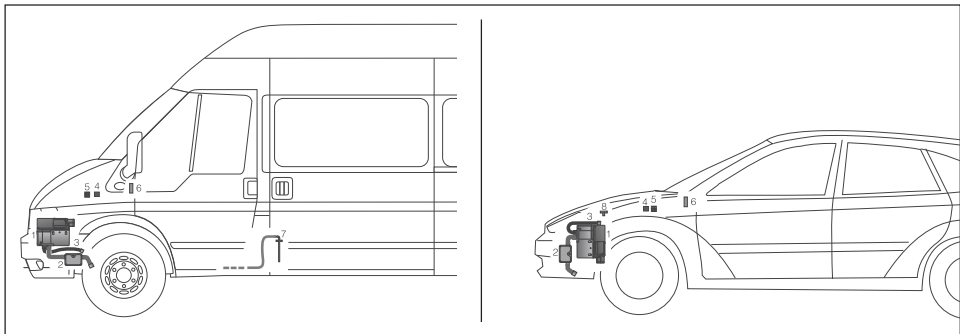

- ① Heater
- ② Exhaust pipe with exhaust silencer
- ③ Combustion air intake silencer
- ④ Fan relay

- ⑤ Fuse bracket
- ⑥ Mini timer
- ⑦ Rising pipe
- ⑧ T-piece for fuel

3 Installation

Possible installation positions


The heater should preferably be installed in the normal position, horizontal with the exhaust connection down to the bottom.

Depending on the installation conditions, the heater can also be mounted in the permitted swivel range, see diagram.

When the heater is operating, the shown normal or maximum installation positions can be varied briefly by up to +15° in all directions. Such deviations caused by the inclined position of the vehicle do not impair the heater functions in any way.

Normal position with permitted swivel range

- Swivel range from the normal position swivelled down to max. 90°: the water connections point downwards.
- Swivel range from the normal position to max. 90° swivelled around the longitudinal axis: the water connections are horizontal.

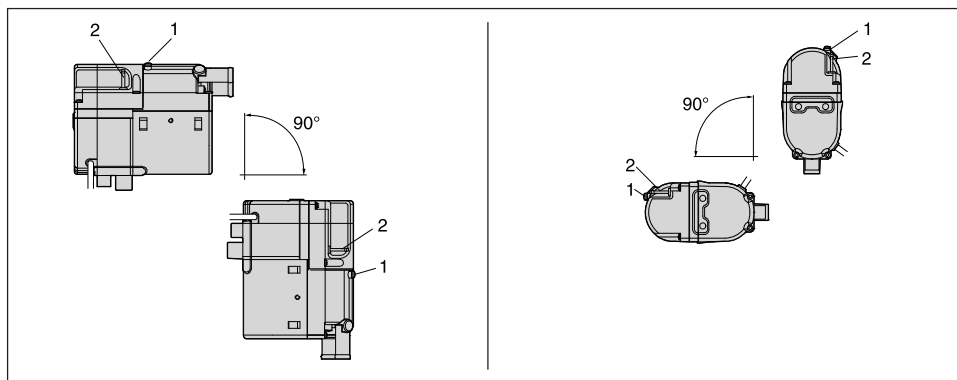


- ① Vent screw: must always be at the top
- ② Fuel connection

Mounting and fastening

Position the heater in the holding clips of the heater bracket and fasten with fastening screw, M6 x 97 (tightening torque 6^{+0.5}Nm). Mount the heater bracket in a suitable position in the engine compartment, possibly using anti-vibration pads if necessary.

Please note!

Depending on the installation space available, the heater can be moved sideways in the bracket and screwed in one of the two fastening threads.

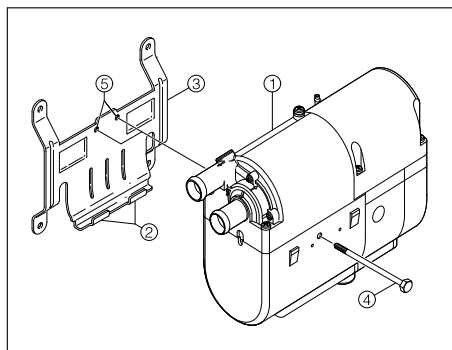

- ① Heater
- ② Bracket clips
- ③ Bracket holder
- ④ Fastening screw
- ⑤ Fastening thread

3 Installation


Nameplate

The nameplate is fastened to the front of the heater. The second nameplate (duplicate) is included in the scope of supply of the heater.

If required, the duplicate nameplate can be adhered in a clearly visible position on the heater or near to the heater.

Please note!

The regulations and safety instructions to be observed for this chapter are stated on page 5.

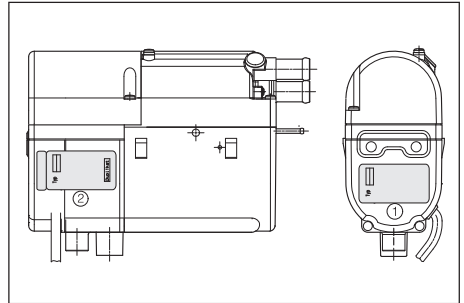

- ① Original nameplate
- ② 2nd nameplate (duplicate)

3 Installation

Connection to the cooling water circuit

The heater is connected to the cooling water circuit in the water feed pipe from the vehicle engine to the heat exchanger. There are four possible alternative installations here.

The alternatives are described on pages 19 – 21.



Danger! **Risk of injuries and burns!**

It is possible for the coolant and components of the coolant circuit to get very hot.

- Parts conveying water must be routed and fastened in such a way that they pose no temperature risk to man, animals or material sensitive to temperature from radiation / direct contact.
- Before working on the coolant circuit, switch the heater off and wait until all components have cooled down completely, if necessary where safety gloves.

Please note!

- When installing the heater, please take note of the direction of flow of the coolant circuit.
- Fill the heater and water hoses with coolant before connecting to the coolant circuit.
- Route the water hoses without any kinks, and in a rising position if possible.
- When routing the water pipes, observe a sufficient clearance to hot vehicle parts.
- Protect all water hoses / water pipes from chafing and from extreme temperatures.
- Secure all hose connections with hose clips (tightening torque = 1.5Nm).
- After the vehicle has been operating for 2 hours or travelled 100 km, tighten the hose clips again.
- The minimum water flow rate is only guaranteed if the temperature difference of the heating medium does not exceed 10 K between water inlet and water outlet during heating.
- Only overpressure valves with an opening pressure of min. 0.4 – max. 2 bar may be used in the coolant circuit.
- The coolant liquid must contain at least 10 % antifreeze all year round as corrosion protection.
- The cooling liquid must contain sufficient antifreeze for low temperatures.
- Before commissioning the heater or after changing the cooling liquid, the whole coolant circuit including heater must be vented free of bubbles according to the instructions issued by the vehicle manufacturer.
- Only top up with coolant approved by the vehicle manufacturer.

3 Installation


Connection to the cooling water circuit

Integrate the heater in the water feed pipe from the vehicle engine to the heat exchanger “inline connection”

Disconnect the water feed pipe from the vehicle engine to the vehicle heat exchanger. Connect up the heater with connection pieces and water hoses to the water feed pipe.

Heating characteristics

When the heater is switched on, the heat flows through the vehicle heat exchanger and the vehicle engine. Once the cooling water has reached a temperature of approx. 30 °C, depending on the selected fan setting the vehicle fan is switched on and the heat is also conveyed to the passenger compartment.

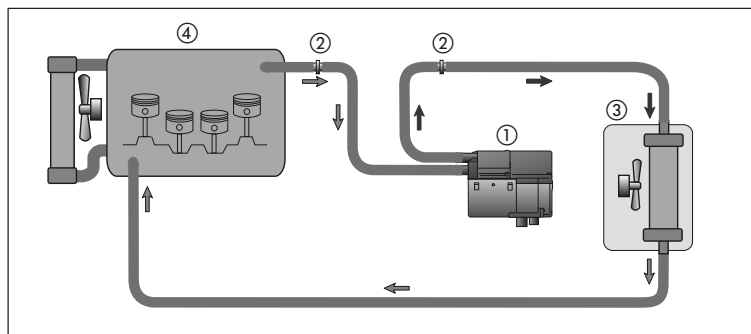

- ① Heater
- ② Connection piece
- ③ Heat exchanger
- ④ Vehicle engine

Integrate the heater in the cooling water circuit with a non-return valve


Disconnect the water feed pipe from the vehicle engine to the vehicle heat exchanger and insert the non-return valve. Connect up the heater to the non-return valve using the water hoses.

Heating characteristics

When the heater is switched on, the heat flows through the vehicle heat exchanger only to the vehicle engine. Once the cooling water has reached a temperature of approx. 30 °C, depending on the selected fan setting the vehicle fan is switched on and the heat is also conveyed to the passenger compartment.

Advantage compared to “inline connection” cooling water circuit

No loss of efficiency in the vehicle heating when the heater is switched off.

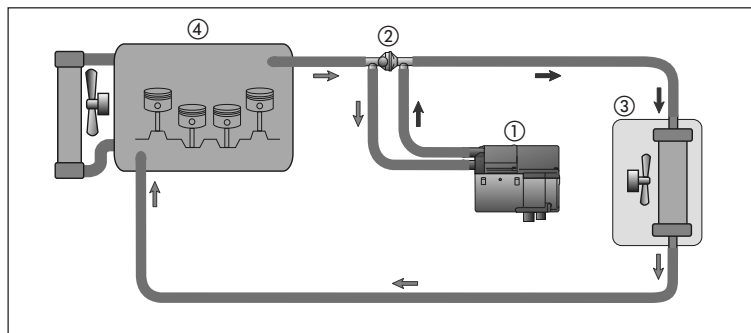

- ① Heater
- ② Non-return valve
- ③ Heat exchanger
- ④ Vehicle engine

3 Installation

Connection to the cooling water circuit

Integrate the heater in the cooling water circuit with a non-return valve, thermostat and T-piece (for *HYDRONIC B 5 W SC / D 5 W SC* only)

Disconnect the water feed pipe from the vehicle engine to the vehicle heat exchanger and insert the non-return valve.

Disconnect the water return pipe from the heat exchanger to the vehicle engine and insert the T-piece.

Connect the heater and thermostat with water hoses to the non-return valve and T-piece as shown in the diagram.


Heating characteristics

Small coolant circuit

Fast heating of the passenger compartment. Initially the heat produced by the heater is only conveyed to the heat exchanger up to a cooling water temperature of approx. 70 °C. This heats the passenger compartment up quickly.

Large cooling water circuit

If the cooling water temperature continues to increase, the thermostat slowly changes over to the large circuit (full change-over at approx. 75 °C). This heats the passenger compartment up and also allows for engine pre-heating.

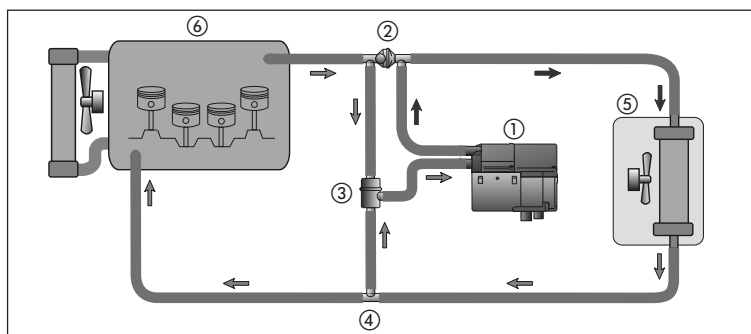

- ① Heater
- ② Non-return valve
- ③ Thermostat
- ④ T-piece
- ⑤ Heat exchanger
- ⑥ Vehicle engine

Please note!

Thermostat, non-return valve and T-piece are contained in the convenient installation kit. Order no. see extra parts catalogue.

Thermostat functions

Cooling water temperature < 70 °C – small coolant circuit:

Connection no. 1 – open to the heater

Connection no. 2 – open to the T-piece


Connection no. 3 – closed to the non-return valve

Cooling water temperature > 75 °C – large coolant circuit:

Connection no. 1 – open (to the heater)

Connection no. 2 – closed (to the T-piece)

Connection no. 3 – open (to the non-return valve)

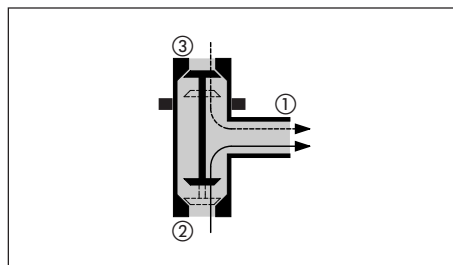

- ① Connection to the heater
- ② Connection to the T-piece
- ③ Connection to the non-return valve

Please note!

Integrate the thermostat into the water circuit with connections ① ② and ③ as shown in the diagram.



3 Installation

Connection to the coolant circuit

Integrate heater in coolant circuit with the combination valve

Combination valve with 5 connections

If the water feed pipe and water return pipe from the vehicle engine to the heat exchanger are installed separately, the combination valve with 5 connections and an additional T-piece has to be used.

Combination valve with 6 connections

If the water feed pipe and water return pipe from the vehicle engine to the heat exchanger are installed in parallel, the combination valve with 6 connections (without T-piece) can be used.

Heating characteristics

Pre-heating mode – small coolant circuit

For the pre-heating mode, the heat is conveyed only to the vehicle heat exchanger so that the passenger compartment heats up quickly.

Extra heating function – partial circuit

When the vehicle engine starts up – low speed – part of the heat is conveyed to the vehicle engine.

Shortens the warming up phase for the engine and heats the passenger compartment.

Extra heating function – large coolant circuit

At higher engine speeds (approx. 200 rpm), the heat is distributed evenly between the heat exchanger and the vehicle engine. Shortens the warming up phase even further and heats the passenger compartment.

Install combination valve with 5 connections

Disconnect the water feed pipe from the vehicle engine to the vehicle heat exchanger and insert the combination valve.


Disconnect the water return pipe from the heat exchanger to the vehicle engine and insert the T-piece.

Connect the heater to the combination valve and T-piece with the water hoses, as shown in the drawing.

Install combination valve with 6 connections

Disconnect the water feed pipe and the water return pipe from the vehicle engine to the vehicle heat exchanger and insert the combination valve.

Connect the heater to the combination valve with the water hoses, as shown in the drawing.

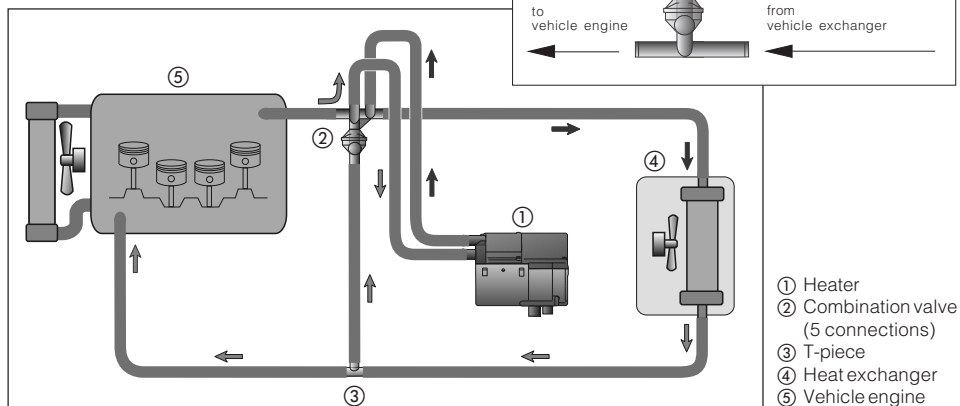

3 Installation

Exhaust system

(Exhaust diagram see page 23)

Mounting the exhaust system

The scope of supply of the universal installation kit includes a flexible exhaust pipe, inner Ø 24 mm, 1000 mm long and an exhaust silencer.

The flexible exhaust pipe can be shortened to 20 cm or lengthened to max. 2 m, depending on the installation conditions.

Fasten the exhaust silencer to a suitable position in the vehicle. Route the flexible exhaust pipe from the heater to the exhaust silencer and fasten with pipe clips. If necessary, also fasten the flexible exhaust pipe with pipe clips at suitable positions in the vehicle. Connect the exhaust end pipe to the exhaust silencer with an end sleeve and fasten with a pipe clip.



Caution!

Safety instructions!

The whole exhaust system gets very hot during and immediately after the heater has been working in the heating mode. This is why the exhaust system must be routed according to these installation instructions.

- The exhaust outlet must end in the open air.
- The exhaust pipe must not protrude beyond the lateral limits of the vehicle.
- Install the exhaust pipe sloping slightly downwards. If necessary, make a drain hole approx. Ø 5 mm at the lowest point to drain off condensation.
- Important functional parts of the vehicle must not be impaired (keep sufficient clearance).
- Mount the exhaust pipe with sufficient clearance to heat-sensitive parts. Pay particular attention to fuel pipes (plastic or metal), electrical cables and brake hoses etc.!
- Exhaust pipes must be fastened safely (recommended clearance of 50 cm) to avoid damage from vibrations.
- Route the exhaust system so that the emitted fumes are not sucked in with the combustion air.
- The mouth of the exhaust pipe must not get clogged by dirt and snow.
- The mouth of the exhaust pipe must not point in the direction of travel.
- Always fasten the exhaust silencer to the vehicle.



Danger!

Risk of injuries and burns!

Every type of combustion produces high temperatures and toxic exhaust fumes. This is the reason why the exhaust system must be installed according to these instructions.

- Do not perform any work on the exhaust system while the heater is working.
- Before working on the exhaust system, first switch the heater off and wait until all parts have cooled down completely, wear safety gloves if necessary.
- Do not inhale exhaust fumes.

Please note!

- Comply with the regulations and safety instructions for this chapter on page 4 – 7.
- If a silencer is fitted, the exhaust end pipe must be much shorter than the flexible exhaust pipe between the heater and the exhaust silencer.

3 Installation

Combustion air system

Mounting the combustion air system

The heater is mounted in the engine compartment, as described in these instructions.

If the intake connection for combustion air is in a position where the combustion air can be expected to be no warmer than 25 °C and whether neither splashed water nor dust/dirt are expected, then no combustion air hose is required.

Otherwise a flexible combustion hose must be mounted with an inner Ø 20 mm and up to 1.5 m long, to ensure that the intake of combustion air comes from an area which complies with the above conditions.

After completing all work, push an end sleeve over the intake silencer / flexible pipe.




Caution!

Safety instructions for the combustion air system

- The combustion air opening must be free at all times.
- Position the combustion air intake to be sure that exhaust fumes cannot be sucked in with the combustion air.
- Do not arrange the combustion air intake to pointing against the wind blast.
- The combustion air intake must not get clogged with dirt and snow.
- Install the combustion air intake system sloping slightly downwards. If necessary, make a drain hole approx. Ø 5 mm at the lowest point to drain off condensation.

Please note!

Comply with the regulations and safety instructions for this chapter on page 4 – 7.

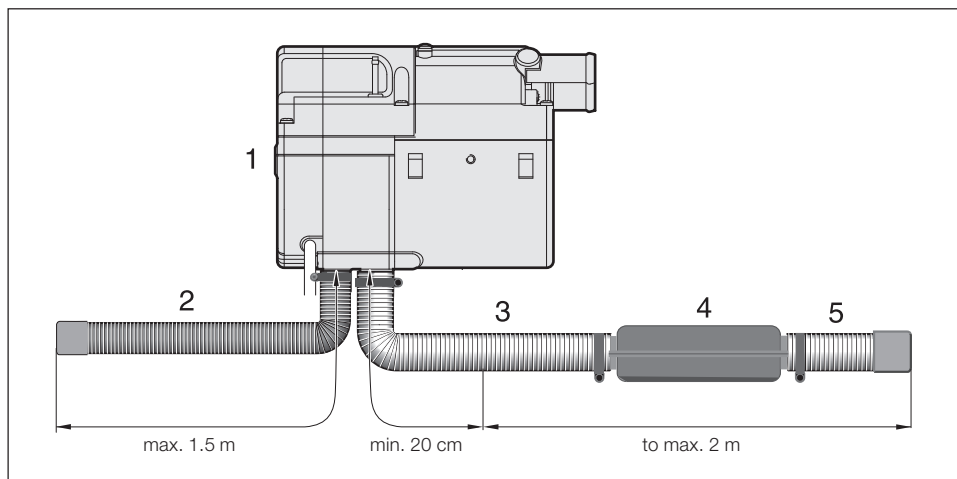

- ① Heater
- ② Combustion air pipe
- ③ Exhaust pipe
- ④ Exhaust silencer
- ⑤ Exhaust end pipe

3 Installation

Fuel supply

Mounting the dosing pump, routing the fuel pipes and mounting the fuel tank

The following safety instructions must be observed when mounting the dosing pump, routing the fuel pipes and mounting the fuel tank.

Deviations from the instructions stated here are not allowed.

Failure to comply can result in malfunctions.



Danger!

Risk of fire, explosion, poisoning and injuries!

Caution when handling fuel.

- Switch off the vehicle engine and heater before refuelling and before working on the fuel supply.
- No naked lights when handling fuel.
- Do not smoke.
- Do not inhale fuel vapours.
- Avoid any contact with the skin.




Caution!

Safety instructions for routing the fuel pipes!

- Only use a sharp knife to cut off fuel hoses and pipes. Interfaces must not be crushed and must be free of burrs.
- The fuel pipe from the dosing pump to the heater should be routed at a continuous rise.
- Fuel pipes must be fastened safely to avoid any damage and / or noise production from vibrations (recommended clearance of approx. 50 cm).

- Fuel pipes must be protected from any mechanical damage.
- Route the fuel pipes so that any distortion of the vehicle, engine movements etc. cannot have any lasting effect on the service life.
- Parts carrying fuel must be protected from interfering heat.
- Never route or fasten the fuel pipes to the heater or vehicle exhaust system. When the systems cross, always ensure there is a sufficient heat clearance. If necessary, install heat deflection plates.
- Dripping or evaporating fuel must never be allowed to collect on hot parts or ignite on electric systems.
- When connecting fuel pipes with a fuel hose, always mount the fuel pipes in a butt joint to prevent any bubbles from forming.

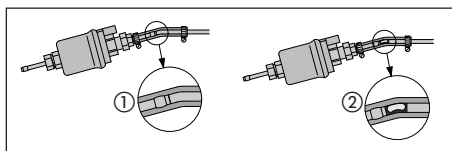

① Correct connection

② Incorrect connection – bubble formation

Safety instructions for fuel pipes and fuel tanks in buses and coaches

- In buses and coaches, fuel pipes and fuel tanks must not be routed through the passenger compartment or driver's cab.
- Fuel tanks in buses and coaches must be positioned in such a way that the exits are not in direct danger from a possible fire.


Please note!

Comply with the regulations and safety instructions for this chapter on page 4 – 7.

3 Installation

Fuel supply for petrol heaters

Fuel feed point with T-piece from the fuel supply line from the tank fitting to the vehicle engine

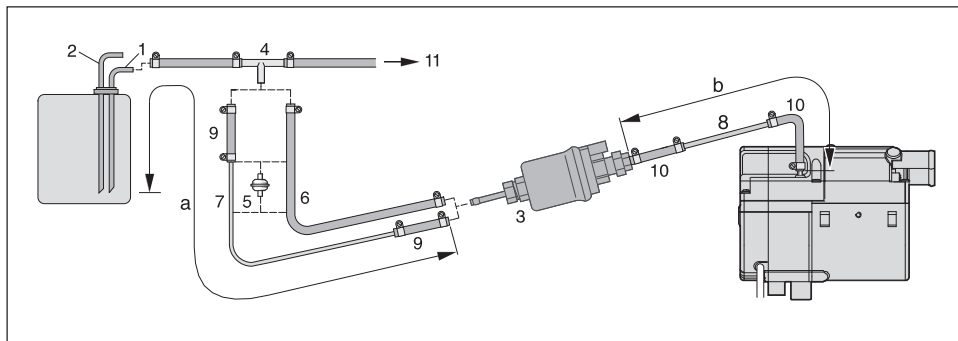

- ① Fuel feed pipe from tank connection – insert T-piece before the fuel pump in the fuel feed pipe.
- ② Fuel return pipe to the tank connection
- ③ Dosing pump
- ④ T-piece, 8-6-8
- ⑤ Fuel filter – only necessary for contaminated fuel.
- ⑥ Fuel hose, 5 x 3 (di = Ø 5 mm)
- ⑦ Fuel pipe, 6 x 2 (di = Ø 2 mm)
- ⑧ Fuel pipe, 4 x 1.25 (di = Ø 1.5 mm)
- ⑨ Fuel hose, 5 x 3 (di = Ø 5 mm), approx. 50 mm long
- ⑩ Fuel hose, 3.5 x 3 (di = Ø 3.5 mm), approx. 50 mm long
- ⑪ To the engine, mechanical fuel or injection pump.

Possible pipe lengths

Intake side
a = max. 2 m


Pressure side
b = max. 4 m

Please note!

Items ④ and ⑤ are not included in the scope of supply "installation kit".
Order no. see extra parts catalogue.

Installation position of the T-piece

Use the installation positions shown in the diagram when inserting a T-piece.

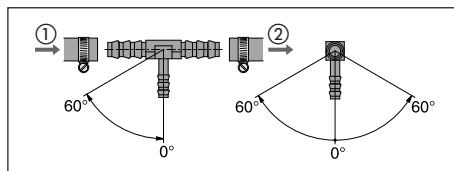


- ① Direction of flow from the fuel tank
- ② Direction of flow to the vehicle engine

3 Installation

Fuel supply for petrol heaters

Fuel feed point with tank connection – ascending pipe, integrated in the vehicle tank

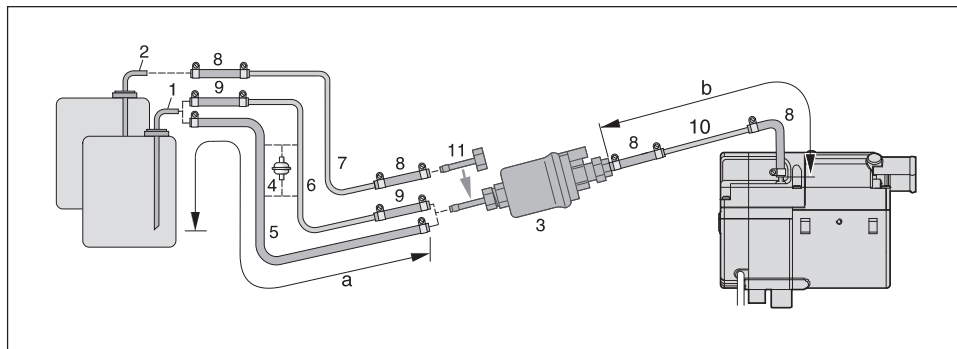

- ① Tank connection for metal tank –
di = Ø 2 mm, da = Ø 6 mm
- ② Tank connection for tank fitting –
di = Ø 2 mm, da = Ø 4 mm
- ③ Dosing pump
- ④ Fuel filter – only required for contaminated fuel.
- ⑤ Fuel hose, 5 x 3 (di = Ø 5 mm)
- ⑥ Fuel pipe, 6 x 2 (di = Ø 2 mm)
- ⑦ Fuel hose, 4 x 1 (di = Ø 2 mm)
- ⑧ Fuel hose, 3.5 x 3 (di = Ø 3.5 mm),
approx. 50 mm long
- ⑨ Fuel hose, 5 x 3 (di = Ø 5 mm),
approx. 50 mm long
- ⑩ Fuel pipe, 4 x 1.25 (di = Ø 1.5 mm)
- ⑪ Connection fitting, da = Ø 4 mm

Possible pipe lengths

Intake side
a = max. 2 m

Pressure side
b = max. 4 m

Please note!

Items ② ⑦ ⑪ are included in the "tank connection" kit.



Caution!

Safety instructions for the fuel supply!


- The fuel must not be conveyed by gravity or overpressure in the fuel tank.
- Withdrawal of fuel after the vehicle's fuel pump is not allowed.
- When the pressure in the fuel pipe is more than 0.2 bar to max. 2 bar, use a pressure reducer (order no. 22 1000 20 08 00) or separate tank connection.
- When the pressure in the fuel pipe is more than 2 bar or there is a non-return valve in the return pipe (in the tank), a separate tank connection must be used.
- When using a T-piece in a plastic pipe, always use support sleeves in the plastic. Connect the T-piece and the plastic pipe with corresponding fuel hoses and secure with hose clips.

3 Installation

Fuel supply for petrol heaters

Installation position of the dosing pump

Always mount the dosing pump with the pressure side rising upwards. Every installation position over 15° is allowed, although an installation position between 15° and 35° is preferable.

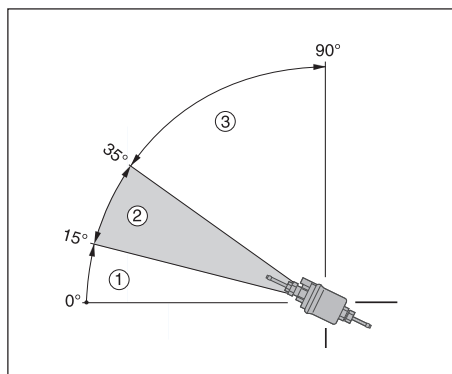

- ① Installation position between 0° and 15° is not allowed.
- ② Preferred installation position in range 15° to 35°.
- ③ Installation position in range 35° to 90° is allowed.


Possible suction and pressure height of the dosing pump

Pressure height from vehicle tank to dosing pump:
a = max. 3000 mm

Intake height in pressure-less vehicle tank:
b = max. 500 mm

Intake height in vehicle tanks with withdrawal by negative pressure (valve with 0.03 bar in tank cap):
b = max. 150 mm

Pressure height of the dosing pump to the heater:
c = max. 2000 mm

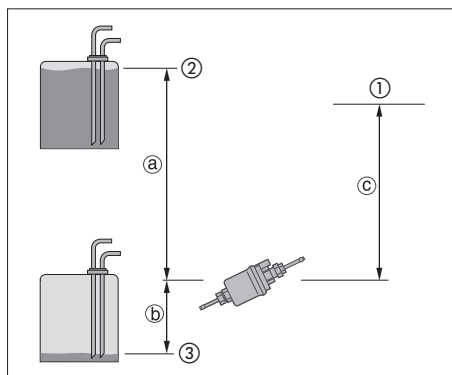

- ① Connection to heater
- ② Max. fuel level
- ③ Min. fuel level

Please note!

Check tank venting.



Caution!


Safety instructions for installing the dosing pump

- Always mount the dosing pump with the pressure side rising upwards – minimum incline 15°.
- Protect the dosing pump and filter from intolerable heat, do not mount near to the silencers and exhaust pipes.

3 Installation

Fuel supply for diesel heaters

Fuel feed point with T-piece from the fuel supply line from the tank fitting to the vehicle engine.

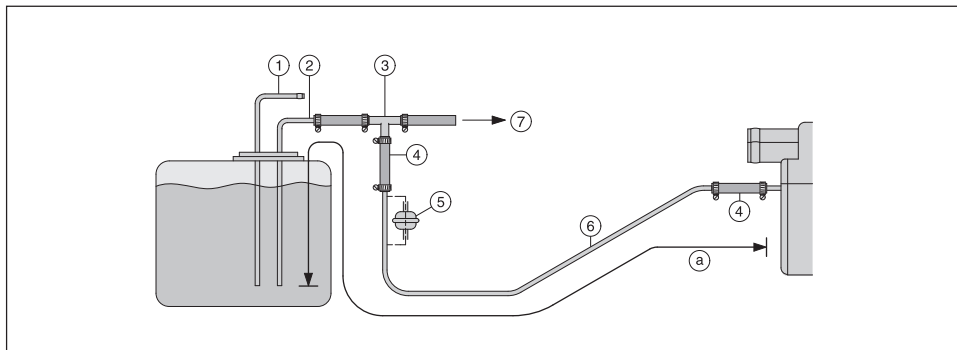

- ① Fuel return pipe from the tank connection
- ② Fuel feed pipe from tank connection – insert T-piece before the fuel pump in the fuel feed pipe.
- ③ T-piece
- ④ Fuel hose, 3,5 x 3 (di = Ø 3.5 mm) approx. 50 mm long
- ⑤ Fuel filter – only necessary for contaminated fuel.
- ⑥ Fuel pipe, 4 x 1 (di = Ø 2 mm)
- ⑦ To the engine, mechanical fuel or injection pump.


Possible pipe lengths

Intake side

a = max. 5 m

Installation position of the T-piece

Use the installation positions shown in the diagram when inserting a T-piece.

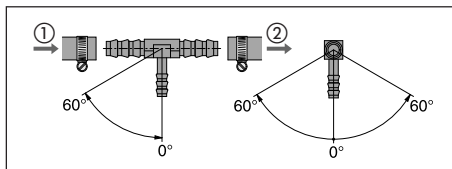


- ① Direction of flow from the fuel tank
- ② Direction of flow to the vehicle engine

3 Installation

Fuel supply for diesel heaters

Fuel feed point with ascending pipe in the tank connection, integrated in the vehicle tank or in the tank fitting

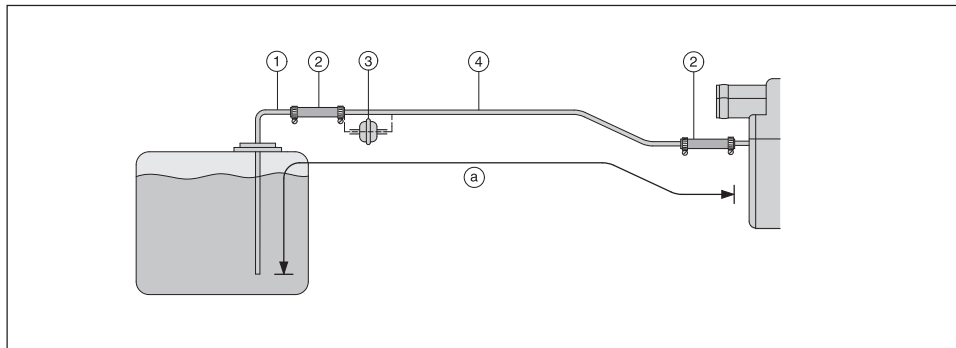

- ① Tank connection for tank fitting, $d_i = \text{Ø } 2 \text{ mm}$, $d_a = \text{Ø } 4 \text{ mm}$
- ② Fuel hose, 3.5×3 ($d_i = \text{Ø } 3.5 \text{ mm}$), approx. 50 mm long
- ③ Fuel filter – only necessary for contaminated fuel.
- ④ Fuel pipe, 4×1 ($d_i = \text{Ø } 2 \text{ mm}$)

Possible pipe length:

Intake side:
a = max. 5 m

Possible intake and pressure height:


Pressure height from vehicle tank to heater:
a = max. 3000 mm

Suction height for pressure-free vehicle tank:
b = max. 1000 mm

Suction height for a vehicle tank with withdrawal under negative pressure (valve with 0.03 bar in tank cap):
b = max. 400 mm

Please note!

Check tank venting.

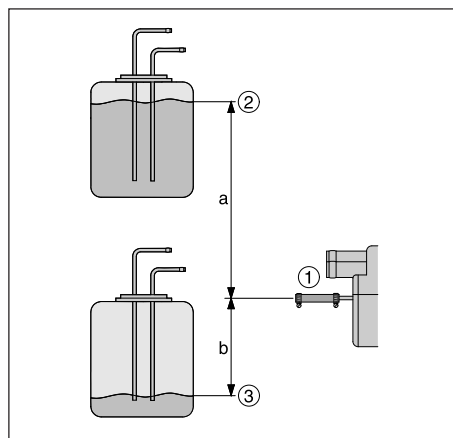

- ① Connection to heater
- ② Max. fuel level
- ③ Min. fuel level

3 Installation

Fuel supply

Fuel quality for petrol heaters

The heater can run on commercially available fuel as per DIN EN 228, as used in the vehicle tank.

Fuel quality for diesel heaters

The heater can run on commercially available diesel fuel as per DIN EN 590 as used in the vehicle tank.

Fuel for special cases

In special cases (above 0 °C), the heater can also run on fuel oil EL or paraffin.

Fuel for low temperatures

Refineries and fuel service stations automatically adjust the fuel to normal winter temperatures (winter diesel). This means that difficulties are only to be expected for extreme drops in temperature, as also apply to the vehicle engine. Please also refer to the vehicle manual.

If the heater is run from a separate tank, please comply with the following rules:

For temperatures above 0 °C, any kind of diesel fuel as per DIN EN 590 can be used.

If no special diesel fuel is available for low temperatures, then paraffin or petrol should be mixed with the fuel according to the following table:

Temperature	Winterdiesel	Addition
0 °C to -25 °C	100 %	-
-25 °C to -40 °C	50 %*	50 % paraffin or petrol

* or 100 % special cold diesel fuel (Arctic diesel)

Please note!

- Mixtures with used oil are **not** allowed!
- After refuelling with winter or cold diesel or the listed blends, the fuel pipes and the dosing pump must be filled with the new fuel by letting the heater run for 15 mins.!

Operation with biodiesel (PME)

The heater is **not** certified for operation with biodiesel.



4 Operation and function

Operating instructions

The heater is operated by a control unit. The control unit is accompanied by detailed operating instructions which you will receive from the company installing the heater.

Please note!

The control units (e.g. mini timer, module timer) are supplied accompanied with operating instructions which will be handed over to you by the company installing the heater).

Important instructions for operation

Safety checks before the start

After a longer interval in operations (after the summer months) the fuse must be put in position and / or the heater connected up to the battery. Check that all parts fit firmly (tighten screws where necessary). Check the fuel system visually for any leaks.

Before switching on

Before switching on or pre-programming the heater, adjust the heating control in the vehicle to "WARM" (maximum setting) and the fan to "SLOW" (low power consumption).

In vehicles with automatic heating, adjust the heating control to "MAX" and open the heating vents before switching the ignition off.

Pre-venting with change-over "heating / venting"

Pre-venting means the possibility of starting the vehicle fan directly from the heater preselection timer or, even more convenient, from the radio remote control TP4i or TP4Ti, thus bypassing the heating mode, so that the passenger compartment, which frequently heats up considerably in summer weather, can be ventilated briefly with fresh air (separate wiring).

Heating at high altitudes

When using the heater at high altitudes, please note:

- Heating at altitudes up to 1500 m:
 - Unlimited heating possible.
- Heating at altitudes over 1500 mm:
 - Heating is possible for short periods at this altitude (e.g. driving over a mountain pass or taking a break in a journey).
 - In the event of a lengthy stay, e.g. winter camping, it is necessary to adjust the fuel supply to the altitude, please contact a JE partner for further information.

Please note!

In diesel heaters, 12 volt, it is possible to install an altitude pump kit (Order No.: 24 0244 00 00 00), which allows the heater to be run at altitudes over 1500 m and up to 2750 m, even during a lengthy stay.

Initial commissioning

The following points are to be checked by the company installing the heater during initial commissioning.

- After installation of the heater, the coolant circuit and the whole fuel supply system must be vented carefully. Comply with the instructions issued by the vehicle manufacturer.
- Open the coolant circuit before the trial run (set the temperature control to "WARM").
- During the trial run of the heater, check all water and fuel connections for leaks and firm fitting.
- If the heater shows a fault during operation, find and eliminate the cause of the fault using a diagnosis unit.

Description of functions

Switching on (pre-heating mode)

When the heater is switched on, the control lamp in the control unit (mini-timer, module timer) lights up. The water pump and the combustion air fan start up. After a certain programme with pre-rinsing and pre-heating, the glow plug and fuel dosing pump start the combustion procedure. Once a stable flame has formed, the glow plug switches off under time control.

Heating mode

Depending on heating requirements, the heater is adjusted in the following stages: LARGE – SMALL – OFF (pause). The temperature limits are permanently programmed in the electronic controller. If the heating requirements in the "SMALL" stage are so small that the cooling water temperature reaches 85°C, the heater goes into the pause mode. The heater continues to run on for approx. 130 seconds, then it switches off (pause mode). The control lamp lights up and the water pump continues to run, even in the pause mode.

Please note!

To compensate for the low heating requirements coming from the vehicle engine, the heater can be operated as pre-heater or combined pre-heater and extra heater, depending on the settings (wiring see circuit diagram).

4 Operation and function

Control and safety devices

- If the heater does not ignite within 90 seconds after starting the fuel pump, the start is repeated. If the heater still does not ignite after another 90 seconds, the heater is switched off. After an unacceptable number of failed start attempts, the controller is locked.*
 - If the flame goes off by itself during operation, the heater is restarted. If the heater does not ignite within 90 seconds after the fuel pump has started again, or it ignites but goes off again within 15 minutes, the heater is switched off. This status can be remedied by briefly switching off and on again.
 - In the case of overheating (e.g. lack of water, poorly vented coolant circuit), the overheating sensor triggers, the fuel supply is interrupted and the heater switched off. Once the cause of overheating has been eliminated, the heater can be re-started by switching off and on again (on condition that the heater has cooled down again sufficiently, cooling water temperature < 70 °C). After the heater has been switched off for overheating an unacceptable number of times, the controller is locked.*
 - The heater is switched off if the upper or lower voltage limit is reached.
 - The heater does not start up when the glow plug is defect or when the electric lead to the dosing pump is interrupted.
 - The speed of the fan motor is monitored continuously. If the fan motor does not start up, if it is blocked or if the speed falls below 40 % of the nominal speed, the heater is switched off after 60 sec.
- * The controller can be enabled again and the faults read off:
- using the module timer
 - using the radio remote control TP5.
- For other controls:
- by connecting up a diagnosis unit
 - using the customer service program KD 2000.
- For operation and fault list, please refer to the enclosed operating instructions or the troubleshooting and repair instructions for the heater.

Please note!

Do not switch the heater off and on again more than twice.

Emergency shutdown – EMERGENCY OFF

If an emergency shutdown – EMERGENCY OFF – is necessary during operation, proceed as follows:

- Switch the heater off with the control or
- pull the fuse out or
- disconnect the heater from the battery.



5 Electrical system

Heater wiring



Caution!

Safety instructions for wiring the heater!

The heater is to be connected up electrically according to the EMC directives.

EMC can be affected if the heater is not connected up correctly. For this reason, comply with the following instructions:

- Ensure that the insulation of electrical cables is not damaged. Avoid: chafing, kinking, jamming or exposure to heat.
- In waterproof connectors, seal any connector chambers not in use with filler plugs to ensure they are dirt-proof and water-proof.
- Electrical connections and ground connections must be free of corrosion and firmly connected.
- Lubricate connections and ground connections outside the heater interior with contact grease.

Please note!

Comply with the following when wiring the heater and the control element:

- Electrical leads, switchgear and controllers must be arranged in the vehicle so that they can function perfectly under normal operating conditions (e.g. heat exposure, moisture etc.).
- The following cable cross sections are to be used between the battery and heater. This ensures that the max. tolerable voltage loss in the cables does not exceed 0.5 V for 12 V or 1 V for 24 V rated voltage.
Cable cross sections for a cable length of:
 - up to 5 m (plus cable + minus cable) = cable cross section 4 mm²
 - from 5 to 8 m (plus cable + minus cable) = cable cross section 6 mm²
- If the plus cable is to be connected to the fuse box (e.g. terminal 30), the vehicle cable from the battery to the fuse box must be included in rating the overall cable length and possibly re-dimensioned if necessary.
- Insulate unused cable ends.

Parts list for the circuit diagrams

Parts list for the circuit diagrams *HYDRONIC*

- 1.1 Burner engine
- 1.2 Glow plug
- 1.5 Overheating sensor
- 1.12 Flame sensor
- 1.13 Temperature sensor

- 2.1 Controller
- 2.2 Fuel dosing pump
- 2.5.7 Relay, vehicle fan
- 2.7 Main fuse 20 A
- 2.7.1 Fuse, actuation 5 A
- 2.7.5 Fuse, vehicle fan 25 A
- 2.12 Water pump

- 5.1 Battery
- 5.1.2 Fuse block in the vehicle
- 5.9.1 Switch, vehicle fan
- 5.10 Vehicle fan

- a) Connect to D+ for extra heating option
- f) Disconnect line
- g) For petrol only
- h) For diesel only
- k) Switch (extra heating, e.g. outside temperature < 5 °C or summer/winter change-over)

Connectors and bush housings are shown from the cable inlet side.

Please note!

The circuit diagrams are printed at the end of this manual.

5 Electrical system

Parts list for the circuit diagrams

Parts list for the circuit diagram control unit – part 1 and part 2

- 2.15.9 Temperature sensor (outside temperature)
- 3.1.9 Change-over switch "heating / venting"
- 3.1.16 Button, radio remote control
- 3.2.9 Timer, module timer
- 3.2.12 Timer, mini 12 / 24 volt
- 3.2.14 Timer, mini lighting blue – 12 volt only
- 3.3.6 Radio remote control (receiver) TP41i
- b) Connect to terminal +15 when heating mode required > 2 h (with ignition switched on).
- c) Lighting terminal 58
- d) Pre-heating with vehicle fan (option)
- e) External button ON / OFF (option)
- i) Connection radio module receiver TP 4i

Cable colours

- rt = red
- bl = blue
- ws = white
- sw = black
- gn = green
- gr = grey
- ge = yellow
- vi = violet
- br = brown
- li = purple

Parts list for circuit diagram control units – part 3.1 and 3.2

- 2.15.1 Temperature sensor (room temperature)
- 2.15.9 Temperature sensor (outside temperature)
- 3.1.16 Button, radio remote control
- 3.1.18 Button, CALLTRONIC
- 3.2.12 Timer, mini 12 / 24 volt
- 3.2.14 Timer, mini lighting blue – 12 volt only
- 3.3.7 Radio remote control TP5
- 3.3.8 Remote control, CALLTRONIC
- 3.8.3 Antenna
- 3.9.1 Diagnosis unit JE diagnosis
- z) Terminal 58 (lighting)

Connectors and bush housings are shown from the cable inlet side.

Please note!

The circuit diagrams are printed at the end of this manual.



In case of faults, please check the following points

- If the heater does not start after being switched on:
 - Switch the heater off and on again.
- If the heater still does not start, check whether:
 - There is fuel in the tank?
 - The fuses are OK?
 - The electrical cables, connections etc. are OK?
 - Anything is clogging the combustion air supply or exhaust system?

Troubleshooting

If the heater remains faulty even after these points have been checked, or another malfunction occurs in your heater, please contact:

- For installation ex works, your contract workshop.
- For subsequent installation, the workshop who installed your heater.

Please note!

Please note that warranty claims can become void if the heater is changed by a third party or by this installation of third party parts.

Maintenance instructions

- Switch the heater off once a month for about 10 minutes, even outside the heating period.
- Before the heating period starts, the heater should undergo a trial run.
If persistent extreme smoke develops, unusual burning noises or a clear fuel smell can be perceived or if electric/electronic parts heat up, the heater must be switched off and put out of service by removing the fuse.
In this case, the heater should not be started up again until it has been checked by qualified staff who have been trained on Eberspächer heaters.
- Check the openings of the combustion air supply and exhaust system after longer standstill periods, clean if necessary!

Service

If you have any technical queries or problems with your pre-heater, dial the following service phone number:

Hotline
Phone 00 49 (0)800 / 12 34 300

Fax hotline
Fax 00 49 (0)1805 / 26 26 24

7 Environment

Certification

The high quality of Eberspächer's products is the key to our success.

To guarantee this quality, we have organised all work processes in the company along the lines of quality management (QM).

Even so, we still pursue a large number of activities for continuous improvement of product quality in order to keep pace with the similarly constantly growing requirements made by our customers.

All the steps necessary for quality assurance are stipulated in international standards.

This quality is to be considered in a total sense.

It affects products, procedures and customer/supplier relationships.

Officially approved public experts assess the system and the corresponding certification company awards a certificate.

Eberspächer has already qualified for the following standards:

Quality management as per

DIN EN ISO 9001:2000 and ISO/TS 16949:1999

Environment management system as per

DIN EN ISO 14001:1996

Disposal

Disposal of materials

Old devices, defect components and packaging material can all be separated and sorted into pure-grade fractions so that all parts can be disposed of as required in an environment-friendly manner or recycled where applicable.

Electric motors, controllers and sensors (e.g. temperature sensors) are deemed to be "electronic scrap".

Dismantling the heater

The heater is dismantled according to the repair stages in the current troubleshooting / repair instructions.

Packaging

The packaging of the heater can be kept in case it has to be sent back.

EU Declaration of Conformity

With regard to the following products

Heater type *HYDRONIC*

we herewith confirm that it conforms with the prime safety requirements stipulated in the directives of the EU Council for harmonisation of the legal regulations of the member states with regard to electromagnetic compatibility (89 / 336 / EEC).

This declaration applies to all heaters produced according to the production drawings *HYDRONIC* which are an integral part of this declaration.

The following standards / directives have been used to assess the product with regard to electromagnetic compatibility:

- EN 50081 – 1 Basic form interference emission.
- EN 50082 – 1 Basic form interference resistance.
- 72 / 245 / EEC – Modification status 95 / 54 / EU interference suppression in motor vehicles.



8 Lists

List of key words A – Z

Keyword	Page	Keyword	Page
A		H	
Accident prevention	7	Heating operation	31
Altitude	31	Heat flow	12, 13
Ambient temperature	12, 13	Hotline	35
Arrangement of the heater	5		
B		I	
Bubble formation	24	Information	4
C		Installation location	15
Cable colours	34	Installation positions	16
Cable harnesses	8, 10	Instructions	4, 5
Cable lengths	25, 26, 28, 29	Installation	15, 16
Certification	36	Introduction	2
Circuit diagrams (at the end of the manual)		Initial commissioning	31
Cooling water circuit	18 – 21	Interference suppression class	12, 13
Combination valve	21		
Combustion air system	23	L	
Contents	2	List of abbreviations	38
Concept of this manual	3		
Control in heating mode	31	M	
Controls	32	Main dimensions	14
Connection to the coolant circuit	18 – 21	Materials	36
		Maintenance	35
D			
Description of functions	31	N	
Declaration of conformity	36	Nameplate	17
Disposal	36		
Dosing pump	27	O	
		Operation	31
E		Operating instructions	31
Electronic components	33, 34		
Emergency shut-down	32	P	
Emergency off	32	Picture symbols	4
Environment	36	Power consumption	12, 13
EU Declaration of Conformity	36	Presentations	4
Exhaust	22	Pressure side	25 – 27
Exhaust system	5, 22, 23	Protection	12, 13
Extra parts	8, 10	Proper use	4
		Purpose	4
F			
Fastening	16	R	
Faults	35	Rated voltage	12, 13
Forced shut-down	32	Regulations	5, 6
Fuel	24 – 30		
Fuel withdrawal	24 – 29	S	
Fuel system	24 – 30	Safeguards	32
Fuel quality	27, 30	Scope of supply	8 – 11
Fuel supply	24 – 30	Special text structure	4
Fuel feed	5	Statutory regulations	5, 6
		Storage temperature	12, 13
		Starting procedure	31
		Suction height	27
		Switching on	31

8 Lists

List of key words A – Z

Keyword	Page
T	
Test symbol	5
Text structure	4
Technical data	12, 13
Troubleshooting	35
T-piece	25, 28
V	
Voltage	12, 13
Voltage limit	12, 13
W	
Wiring	33
Weight	12, 13

List of abbreviations

ADR

European agreement about the international transport of dangerous goods on the road.

ADR99

Dangerous goods regulations for France.

EC type approval

Permit awarded by the Federal Vehicle Office for the production of a heater for installation in motorised vehicles.

EMC directive

Electromagnetic compatibility.

JE partner


 


J. Eberspächer partner.

PME

Biodiesel as per DIN V 51606.







Circuit diagram *HYDRONIC*

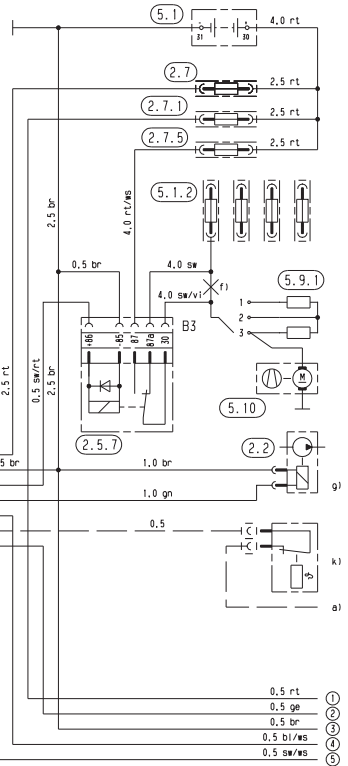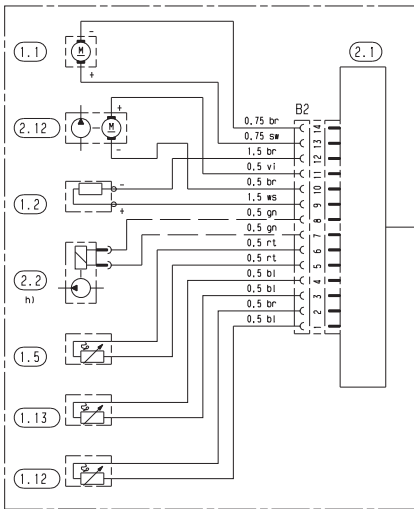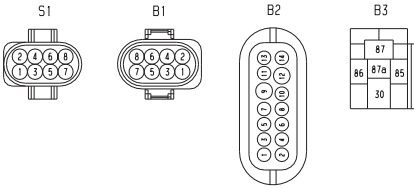


25 1920 00 96 01 D


Circuit diagram control elements – part 1

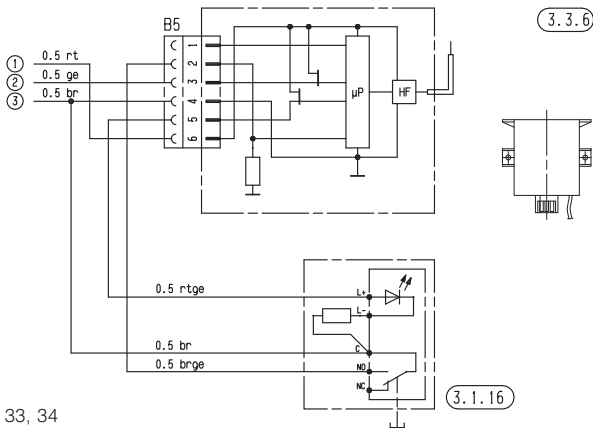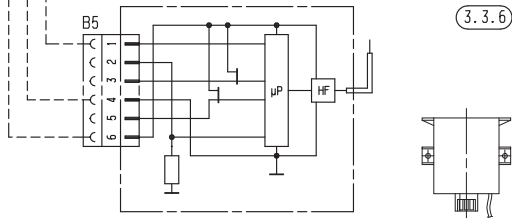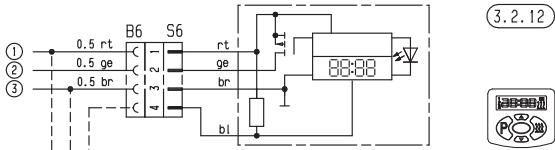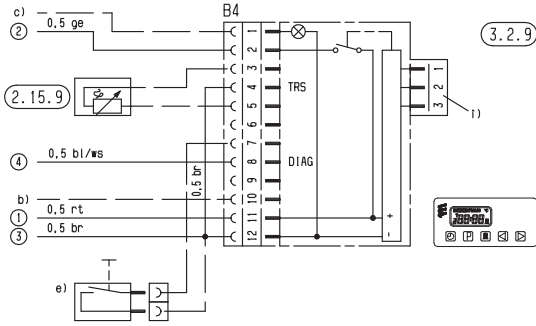



Circuit diagram control elements – part 2

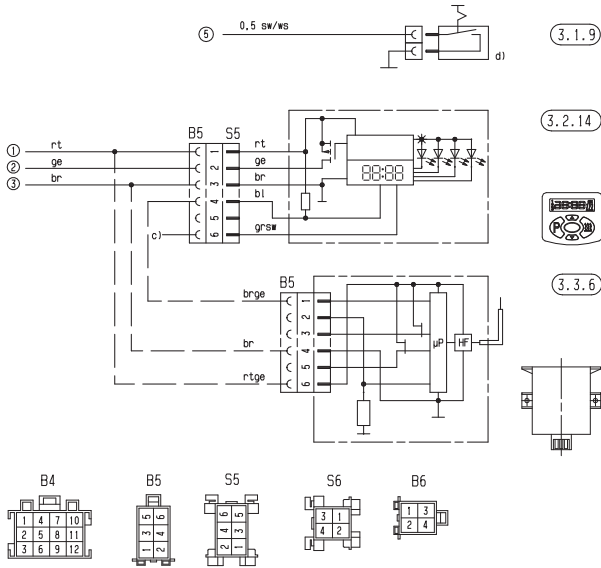

Circuit diagram control elements – part 3.1

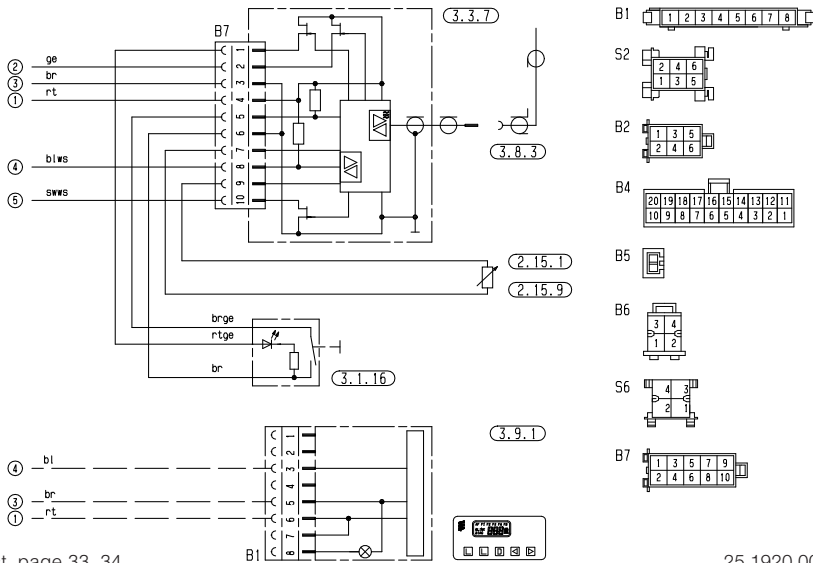

Circuit diagram control elements – part 3.2

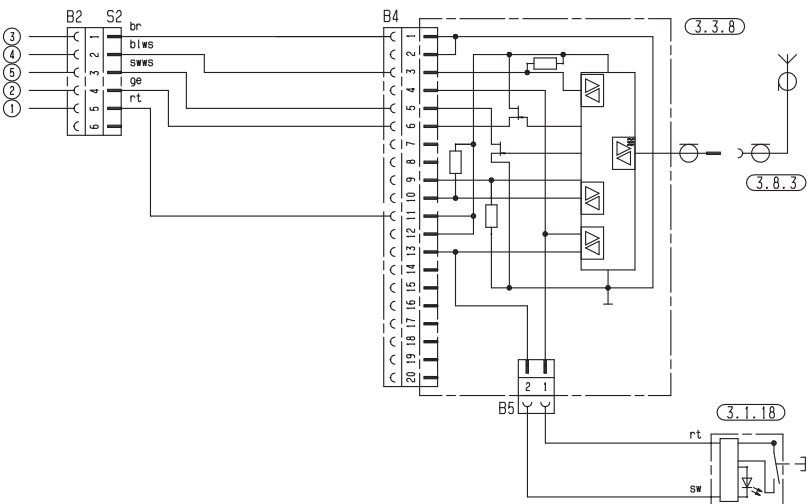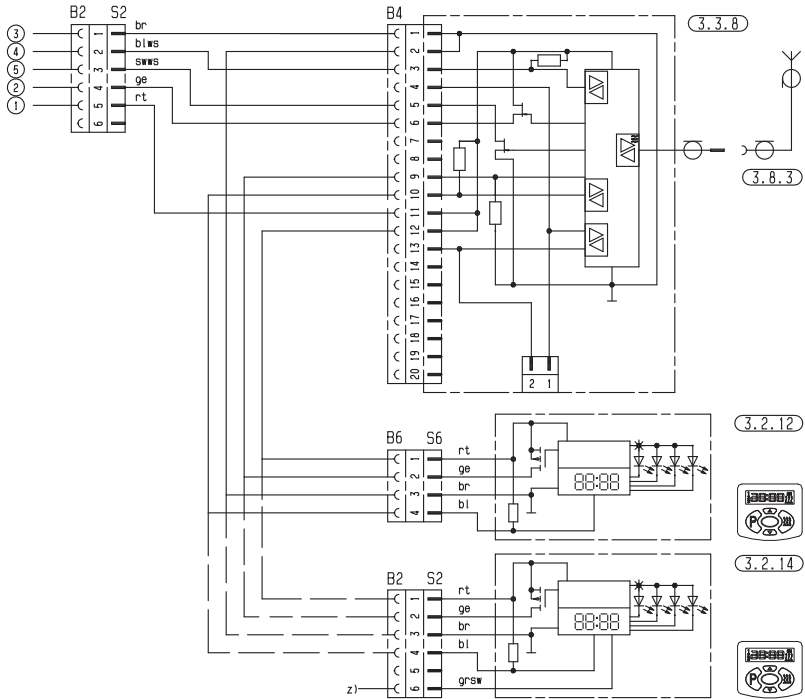



Mini-Clock

Operating / Installation Instructions



- 1 Key to activate the setting capabilities
- 2 / 3 Time setting keys forwards / backwards
- 4 ON / OFF key to activate / deactivate the preset time
- 5 Current time, preset time and heating time
- 6 Symbol for activated preset time
- 7 Symbol for heater operation
- 8 Symbol for preset time 1, 2 or 3

General remarks

Setting and operating the Mini-Clock

- If a key is not depressed within 15 seconds, the display will return to its initial state – Current time.
- When setting the time with the keys 2 or 3, the setting speed is accelerated when the key is kept depressed.
- Up to three preset times can be set and activated on this Mini-Clock. Each preset time is deactivated after the heating period, and it must be newly activated for each new heating period – see activate / deactivate the preset time.

Setting functions on the Mini-Clock

Setting-up for the first time:

After connection to the power supply all symbols on the display will start to flash. The heater cannot be turned on in this state. The current time has to be set first.

Press key 1: The clock time flashes. Set the time with key 2 or 3. Press key 1: The time is displayed; the colon flashes.

Setting the time:

Press key 1 for more than 3 seconds: The time flashes. Set the time with key 2 or 3. Press key 1 within 5 seconds: The time is displayed and the colon flashes.

Note:

If, after the time has been set, key 1 is not pressed within 5 seconds, the Mini-Clock will be transferred to the mode "Setting the Heating Time".

Setting the heating time:

Press key 1 for more than 3 seconds: The time flashes. The Mini-Clock is automatically transferred to the mode "Setting the Heating Time" if no key is pressed for 5 seconds.

The heating symbol is displayed, and the heating time flashes.

Set the heating time (10 to 120 minutes) with key 2 or 3.

Press key 1: The time is displayed once again and the colon flashes.

Setting the preset time:

Press key 1 once, twice or three times to call the preset time 1, 2 or 3. The display will then indicate the preset time, for instance 1 and symbol 1. Set the preset time with key 2 or 3. The preset time is activated or deactivated with key 4. The "ON" symbol is displayed when the preset time has been activated.

Symbol 1, 2 or 3 is displayed when the preset time is activated.

Operating functions of the Mini-Clock

Switching on the heater:

Press key 4. The heating duration is ... minutes. The display indicates the remaining heating time and symbol 7.

Switching off the heater:

Press key 4. The heating continues for approx. 3 minutes. The display indicates the current time.

Continuous operation:

Press key 3 and keep it depressed while pressing key 4. The heater will now remain switched on until key 4 (switching off the heater) is pressed again.

Preset time – Activate / deactivate:

Press key 1 to select the preset time 1, 2 or 3. Activate or deactivate the preset time with key 4.

The "ON" symbol is displayed when the preset time is activated. Symbol 1, 2 or 3 is displayed when the preset time is activated.

Special functions only in conjunction with the TP41 / TP41i remote control

Programming the receiver to recognize the transmitter:

Press key 2 and keep it depressed while pressing key 4. The display indicates 2 horizontal lines.

The display returns to its initial state when the receiver has been successfully programmed. The display automatically returns to the initial status after 35 seconds if the transmitter is not recognized. In this case repeat the above procedure once again.

Installing and connecting the Mini-Clock

Follow the drawing to install the Mini-Clock.


The drilling template (can be peeled off and is self-adhesive) is applied on the front.

Follow the diagram to connect the Mini-Clock.


Note:

Do not press the display and control panel when installing the Mini-Clock.

Mounting drawing

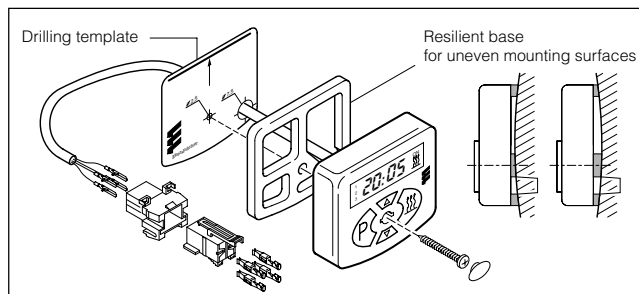

Connecting diagram

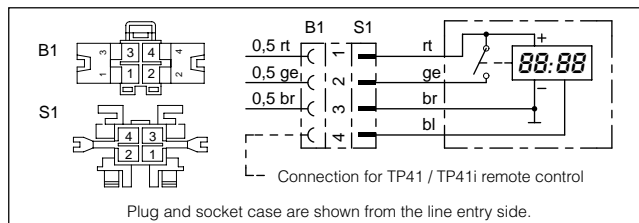

D
S
GB
F



www.eberspaecher.com

J. Eberspächer
GmbH & Co. KG
Eberspächerstr. 24
D - 73730 Esslingen
Telefon 0711 939 - 00
Telefax 0711 939 - 0643
info@eberspaecher.com



Eberspächer